

# Pillow Grid


Whiteboard shelf

# Assembly instruction


Robert Bronwasser

1. Clean the back surface of the whiteboard with a degreaser
2. Remove the tape backing
3. Position the shelf on a dry and clean surface according to the drawings below
4. Rub the shelf firmly against the whiteboard

**NOTE:** Tape is fully cured after 72 hours

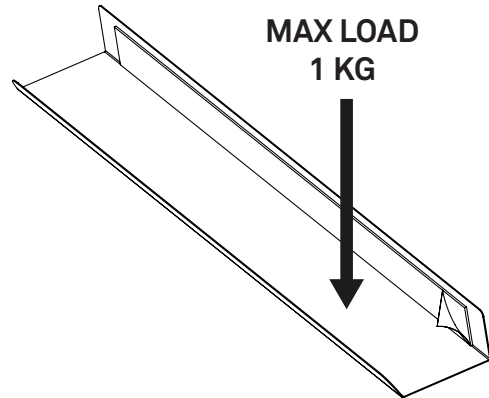



## Centre shelf




6066.  
80x 120 cm




6068.  
80x 160 cm

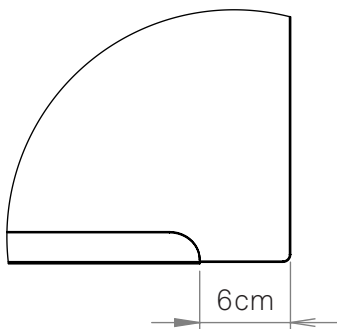

6067.  
160 x 80 cm



6065.  
120 x 80 cm



6064.  
80 x 80 cm